

## PT2248 Isocon

### Isocon Dip Switch Settings

The Isocon requires the dip switches to be set correctly for communication in the Guardian system. The unit does not come configured correctly from factory.

There are two sets of switches: the “top” switches and the “bottom” switches.

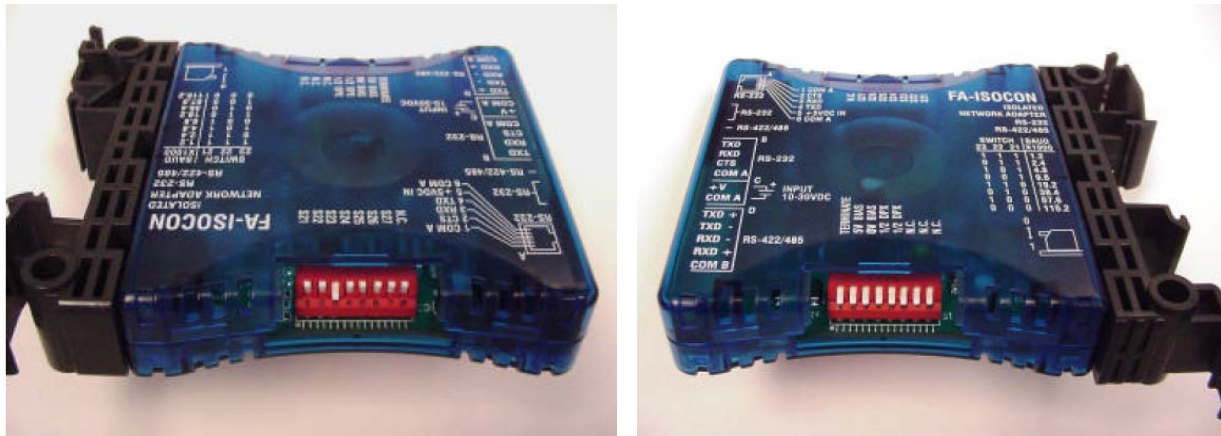


Figure 1: ISOCON top switches (left) and bottom switches (right)

#### Top Switches

S21	S22	S23	S24	S25	S26	S27	S28
DOWN or ON	UP or OFF	UP or OFF	DOWN or ON	DOWN or ON	DOWN or ON	UP or OFF	UP or OFF

#### Bottom Switches

TERMINATE	5V BIAS	0V BIAS	½ DPX	½ DPX
UP or OFF	DOWN or ON	DOWN or ON	UP or OFF	UP or OFF